
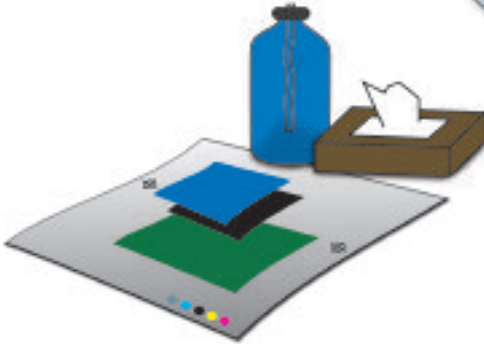


How Best to Use R/bak® SA 3000

When using sleeves, use minimum air pressure.


This will reduce sleeve distortion, preventing wrinkles, extending sleeve life and improving registration.

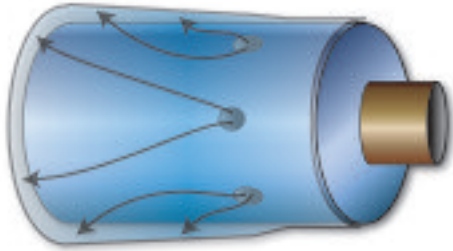

When cleaning the plate and cylinder/sleeve always follow the plate and sleeve manufacturers' cleaning recommendations. Typically it is a combination of normal propyl alcohol and water.

Avoiding chemicals like ethyl acetate (which leave a surface contaminated) will prevent adhesive degradation and extend sleeve life.

When demounting the tape, use a smooth, slow, downward motion with a constant pull at an angle of less than 90 degrees. This will reduce the stress in the tape, preventing tape separation and excess cleaning time.

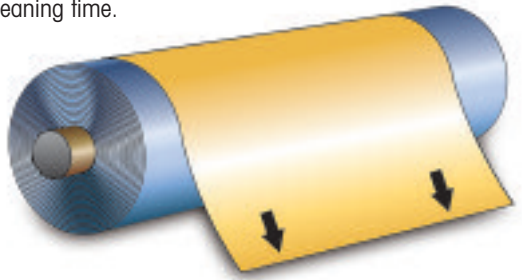

When cutting the mounting tape, use a clean, sharp knife. This will provide added control and result in cleaner cuts with improved tape lay-down and flatter seams.



R/bak® SA 3000 Tapes

For more information please contact the
Rogers Solution Center at 860-928-8926.
www.rogerscorporation.com/SA3000