

MAGTREX[™] 555

High Impedance Laminates Fabrication Guidelines

MAGTREX 555 materials are constructed from a proprietary, low loss, high resistivity ceramic filler and a high temperature thermoplastic PTFE matrix. This yields a system which is conformable, through hole via capable, and mechanically and electrically stable. These laminates feature a closely matched X/Y axis permeability and permittivity of 6 and 6.5, respectively, along with low magnetic and dielectric loss below 500 MHz. MAGTREX 555 high impedance laminates feature a low X, Y, Z CTE closely matched to copper for thermal reliability and are available in thicknesses from 40 to 260 mils. They are offered with or without copper cladding.


These guidelines were developed to provide fabricators with basic information on processing double-sided and multi-layer boards using copper clad Magtrex $^{\text{m}}$ 555 laminates.

A Rogers' technical service engineer or sales representative should be contacted for more detailed processing information or to discuss processing of multi-layered designs.

\\\ Notes on Packaging, Receiving, Storage, and Preparation for Processing

Receiving

- 1. Open the shipping cartons and inspect material immediately upon receipt.
- 2. Advise the carrier of any shipping damage noted. It is helpful to photograph the containers and contents to support your claim.
- 3. All quality problems should be reported to Rogers' Customer Service as soon as possible, and not later than 30 days after receipt of the product.
- 4. Damaged or rejected material should not be returned without a proper return authorization obtained from the Customer Service Representative. Returns without proper authorization may be refused.
- 5. Rogers Corporation maintains full traceability records for individual laminates based upon lot and sheet numbers. Maintaining traceability is often essential to understanding and correcting any problems that may arise. It is strongly urged that customers adopt an appropriate procedure for maintaining the identification of individual panels through storage, processing, and delivery of final product.
- 6. Every panel is packaged and labeled with the product identification and lot and sheet numbers. An example of a typical label is provided. Verify that this label is present on individual cores when the shipment is received. (See example)

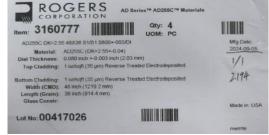

Emple of Label

MAGTREX[™] 555 FABRICATION GUIDELINES



Storage

Magtrex 555 PTFE-based laminates can be stored indefinitely at normal ambient room temperatures (65°F to 85°F, 18°C to 30°C) and normal humidity levels. At room temperature, the dielectric materials are inert to high humidity and atmospheric pollutants such as industrial gases and marine salts. However, metal claddings, such as copper foil, can be oxidized or corroded during long term storage due to high humidity, sulfur oxides, and marine salts. Normal cleaning procedures, covered later in this publication, readily remove traces of corrosion from properly stored materials.

It is preferred to store materials in the original boxes which should be stacked on a flat surface and out of the way of mobile handling and moving equipment. Cartons should be stacked to a maximum of five high to avoid excessive weight on the bottom packages.

\\\ Single- and Double-Sided PCB Fabrication Guidelines

Surface Preparation

Chemical methods of cleaning/preparing copper surfaces are preferred. Mechanical surface preparation tends to cause microscopic scratches in copper and may distort the panels. Scratches may become stress risers that can lead to thermal stress cracks in some environmental conditions while mechanical distortions may challenge effective registration of fine features. While strongly recommending against abrasive cleaning, we recognize that in some circumstances that abrasive cleaning is necessary. When abrasive cleaning is required, it should be performed with minimal pressure and knowledge of the risks involved. Brush scrubbing may cause material distortion.

Tooling Holes

Pinning or tooling holes can be punched, drilled, or routed using normal procedures.

Drilling

1. Avoiding Smear

Smear on drilled via walls is a well-known challenge when processing PTFE materials. The low modulus resin system may stretch slightly during drilling, causing a connected "flap" of resin to form. Furthermore, small pieces of debris may become lodged between the hole wall and the tool during drilling where they become shear-deformed and are loosely re-deposited onto the hole wall. PTFE resin flaps and re-deposited debris can not be removed during traditional plasma or permanganate desmear processing.

Re-deposited debris can be dislodged using vapor honing. But, a proven process to remove the flap-style smear that is connected to a hole wall does not exist. As this type of smear cannot be readily removed, it must be avoided by employing tightly controlled drilling parameters and conservative tool life expectations.

2. Stack Construction

Magtrex[™] 555 cores can be drilled individually or in stacks using pressed phenolic composite boards for entry and exit. The total thickness of the core material plus entry material and penetration into exit material should not exceed 75% of the drill's flute length. For most applications, the maximum stack height should be less than 0.240 inch (6.1 mm).



3. Drill Type

Carbide drills should be used to minimize wear of cutting edges. Standard style drills with an included lip angle of 130° are recommended. Undercut style drills where the flute diameter is reduced 0.025" (0.65 mm) from the cutting end may help to reduce re-deposited smear. The use of new drills is strongly urged. Re-pointed drills, if used, must be precision ground and visually inspected prior to use. Expected hit yields should be reduced by 50% each time a drill is repointed.

4. Drill Parameters

The optimum tool surface speed and infeed rates are 250-300 surface feet per minute (60 to 90 meters per minute) and 0.002" (0.045 mm) to 0.003" (0.070 mm) per revolution. The retract rate should be maintained between 400 and 500 inches per minute (10 and 13 meters per minute). The drill bit should be changed once it has drilled 12" (30 cm) of dielectric.

Equations for using surface speed, infeed rate, and tool diameter to calculate spindle and infeed speeds are provided below along with a quick-reference table:

Entry Phenolic Composite: 0.010"-0.030" (0.25-0.75 mm)

Exit Phenolic Composite: >0.060" (1.5 mm)

Chip Load: 0.002"-0.003" (0.045-0.070 mm)

Surface Speed: 200-300 ft/min (60-90 m/min)

Retract Rate: 400-500 inch/min (10-13 m/min)

Tool Life Estimate:

<u>Stack Height</u>	<u>Maximum Hit</u>
0.060" (1.5 mm)	300
0.120" (3.0 mm)	250
0.180" (4.5 mm)	100

Equations for calculating spindle speed and infeed rate:

Spindle Speed (RPM)=950/Tool Dia (inch)

Infeed (IPM)=Spindle Speed (RPM) X 0.002 (inch)

<u>Tool</u>	<u>Size</u>	<u>Spindle Speed</u>	<u>Inf</u>	<u>eed</u>
(in)	(mm)	(RPM)	(IPM)	(m/m in)
0.0197	0.50	48500	96.4	2.4
0.00256	0.65	37100	74.2	1.9
0.0295	0.75	32200	64.4	1.6
0.0394	1.00	24100	48.2	1.2
0.0492	1.25	20000	40.0	1.0
0.0625	1.59	20000	40.0	1.0
0.1250	3.18	20000	40.0	1.0



5. Deburring

The use of flat, rigid entry/exit materials, conservative drilling parameters, and limited hit counts with new drills should minimize the risk of copper burring. When drilled properly, the cores should be ready for subsequent processing. Chemical preparation is preferred, but if mechanical or hand pumice scrubbing processes are used to deburr boards, the force applied must be minimized to prevent gouging and dimensional distortion.

6. Hole Preparation

Loosely re-deposited debris in the holes can be removed using vapor- or hydro-honing processes. These processes involve directing abrasive particles carried in water or air streams through drilled holes. The soft laminates must be adequately supported through these processes.

Drilled holes in PTFE-based laminates must be treated prior to the deposition of a conductive seed layer (e.g., electroless copper or direct metallization). Not performing a surface activation treatment will most likely result in poor metal adhesion or plated voids. Two common pre-treatments for PTFE materials are sodium treatment and plasma treatment. Either can be used for treating Magtrex™ 555 materials.

Sodium treatments consist of highly reactive sodium naphthalene compounds in glycol ether solution. They are very effective at making PTFE surfaces wettable prior to metal deposition. Recommended application procedures available from the vendors of sodium treatment products are applicable when processing filled PTFE materials with one exception.

The treatment time should not exceed sixty seconds while treatment time of 30 seconds in duration are preferred. Controlling exposure time is required to reduce the risk of absorption of chemicals into the dielectric material surrounding the drilled holes. Sodium treated Magtrex™ 555 cores should be baked at 125C for 60 minutes just prior to metallization..

Sources for sodium treatment chemicals:

FluoroEtch® Etchant

Acton Technologies, Inc 100 Thompson St Pittston, PA 18640 570-654-0612

W.L. Gore Tetra-Etch® etchant 500 ML available from

R.S. Hughes Company, Inc 1162 Sonora Court Sunnyvale, CA 94086 408-739-3211

Sources for sodium treatment services:

FluoroEtch® Etchant

Acton Technologies, Inc 100 Thompson St Pittston, PA 18640 570-654-0612

G & S Associates 1865 Sampson Ave. Corona, CA 92879 http://www.gsassociates.com 951-739-7513

\\\ 100 S. Roosevelt Avenue \\\ Chandler, AZ 85226 \\\ Tel: 480-961-1382 \\\ Fax: 480-961-4533 \\\ www.rogerscorp.com

Fabrication Notes

MAGTREX[™] 555 FABRICATION GUIDELINES



A recommended plasma treatment prior to metal desposition would use a 70/30 H2/N2 blend, NH3, or N2 gases. Plasma conditions would be:

Pressue: 100 mTORR Pump-down

250 mTORR Operating

Power: 4000 Watts

Frequency: 40 KHz

Voltage: 500 - 600 V

Cycle Time: 410-30 Minutes

Metallization

Electroless copper processes or direct deposit electroless copper alternatives may be used to deposit a conductive seed layer once the PTFE surface has been properly treated (and baked if a sodium treatment process was used). As the PTFE resin system is soft and somewhat compressible, a flash plate build-up of 0.0001"-0.0003" (0.0025-0.0076mm) thick copper should be applied prior to preparing metal surfaces for photoresist.

Resist Strip, Cu Etch, Sn or Sn/Pb Strip

Standard etchants and strip solutions may be used. Thin cores may require the support of leader boards or frames through conveyorized processes. Complete rinsing (preferred: 20-30 minutes in 70F+ distilled or de-ionized water) and baking (preferred: 125°C for 60 minutes in air or for 30 minutes under vacuum) of cores should immediately follow the final strip process.

The post-etched surface of the cores will retain the imprint of the copper cladding's dendritic tooth structure. This surface, if left undisturbed, provides adequate surface area for mechanical bonding of most soldermasks and adhesive systems used for multi-layer bonding. Not wiping or scrubbing the etched surfaces will allow the cores to proceed through soldermask application or multi-layer bonding without requiring special surface pre-treatments.

Soldermask Application

Epoxy-based soldermasks such as Hysol® SR1000 are preferred if the soldermask will be selectively silver screened. Most photoimageable soldermasks have been found to provide adequate adhesion providing the post-etch surface has been preserved and the cores have been baked prior to application of the coating.

Final Metal Surface

All final metal surface options (i.e. HASL, Sn, Sn/Pb, Ni/Au, Ag, OSP, etc.) can be applied to circuits on Magtrex™ 555 materials. Exposure time to fluxes should be less than 30 seconds prior to HASL or reflow. Any processes requiring flux or oil should be immediately followed by a thorough rinse (hot water is preferred, a 15-minute rinse in clean solvents such as methanol, ethanol, or isopropyl alcohol may be required if dielectric has been exposed to water insoluble solvents) and bake (30-60 minutes at 125°C).

Final Circuitization

Individual circuits in Magtrex[™] 555 materials can be routed, scored, punched, or lased depending upon edge quality requirements. Detailed recommendations for routing are provided below:

These guidelines were developed to minimize burrs and maximize tool life when routing stacks of double sided boards. This information should also be applicable to most bonded assemblies.



Guideline Summary:

Chip Load: 0.00125"- 0.00250"/rev.

(32 mm - 64 mm/rev.)

Speed: 200 - 600 sfm

(61 - 183 m/min)

Peripheries: Conventional Cut

Internal Cut-outs: Climb-cut

Tool Type: Double fluted spiral endmill-carbide

Exit/Entry: Phenolic or composite board

Tool Life: 20 - 30 linear feet

(6 - 9 meters)

Recommended Tool Type:

Best results have been obtained with a double fluted spiral endmill. Other carbide endmills (ie. single flute, three flute, etc.) may also be used without significantly impacting quality. However, conventional diamond cut and chip breaker router bits should not be used since they generally yield inferior quality and poor effective tool life.

Machining Parameters:

<u>Tool Diameter</u>	<u>Spindle Speed</u>	<u> Lateral Feed Rate</u>
1/32″	40 KRPM (327 sfm	75 IPM (0.0019/rev.)
1/16″	30 KRPM (491 sfm)	75 IPM (0.0025"/rev.)
3/32"	20 KRPM (491 sfm	50 IPM (0.0025"/rev.)
1/8″	15 KRPM (491 sfm)	37 IPM (0.0025"/rev.
1.0 mm	40 KRPM (125 m/min	2.0 m/min (50 mm/rev.
1.5 mm	32 KRPM (150 m/min)	2.0 m/min (63 mm/rev.)
2.5 mm	19 KRPM (150 m/min)	1.2 m/min (63mm/rev.)
3.0 mm	16 KRPM (150 m/min)	1.0 m/min (63 mm/rev.)

^{*} Pre-route vacuum channels in the backer board to provide adequate air flow through the channels during routing.

^{*} Double pass (opposite directions) when two clean edges are required.



Entry/Exit/Interleaving Material and Table Configuration:

Burrs and loose debris can be minimized by using entry and exit material, compressible interleaving sheets, and open vacuum channels. The entry and exit material provide the support necessary to minimize material deflection and obtain cleanly

cut edges. The interleaving material (often 2-4 sheets of Kraft paper) conforms around metal features and offers support to etched dielectric surfaces. Open channels in the backer material significantly increase the effectiveness of the routing

machines vacuum system by allowing air to flow up through channels during routing. This minimizes the need for deburring and debris removal after routing by preventing flute and channel clogging. The vacuum measured at the spindle should be at least 30 in. H2O for best results.

Vacuum channels are prepared by pre-routing the backer material with a tool that is 1.5 to 2.0 times the diameter of the tool used to rout the panels. Channel depth is usually about 0.060" to 0.100" (1.5 - 2.5 mm). The routed peripheries and cutouts in the backer material are joined with channels that extend to areas outside the panel periphery. This allows air to be drawn through the channels during routing.

Figure #1 (below) is an example of a pre-routed backer board. There are two boards per panel. Each board has an internal cut-out. Three connecting channels extend to areas outside the periphery of panels to be routed.

When routing parts, "entry material" is placed above and below the stack of panels.

The "entry material" placed below the stack prevents deflection of material into the oversized vacuum channels in the backer board. During routing, the tool cuts through the thin channel overlay (0.015" to 0.025" entry) to provide access to the vacuum channels.

Climb-Cut vs. Conventional Cut:

The leading edge of a routed channel is typically cleaner than the trailing edge (figure #2-below). Therefore, peripheries should be conventional cut and internal cut-outs should be climb-cut to maximize edge quality on the finished part (figures 3 & 4). If both edges of a routed channel need to be cleanly cut, the tool direction should be reversed for a second pass through the channels. This will remove most of the debris left on the trailing edge during the first pass (figure #2 - below).

Routing Through Copper Cladding:

Routed edge quality is usually superior when routing through the copper foil since it helps constrain the dielectric material. However, good results can generally be obtained with or without copper cladding.

Stack Height:

At least 20%-30% of the flute should be exposed above the entry material to allow for debris removal. This leaves 70%-80% of the flute length available for routing the panels, entry material and exit material. The maximum stack height can be calculated by subtracting the entry thickness and exit penetration depth from the available flute length (70%-80% of the actual flute length).

Example:

0.0625" endmill with 0.260" flute length 0.015" entry and vacuum channel overlay 0.020" penetration into vacuum channels

1.75 x 0.260" (available flute length)

- 0.015" (entry material)
- 0.015" (exit overlay)
- 0.020" (vacuum channel penetration)

0.145" (maximum stack height)



Estimated Tool Life:

Edge quality will slowly degrade as the tool wears. Fabricators should base tool life on the edge quality requirements for a particular job. In general, 20 - 30 linear feet (6-9 meters) of material can be routed with the same tool without sacrificing edge quality. This estimate is basically the same with or without a second pass. Since flute and channel clogging will significantly impact edge quality, vacuum channels are usually needed to minimize the need for tool changes.

\\\ Multilayer Considerations

1. Inner-Layer Preparation

Standard photoresist and etch procedures are used. Care should be taken to preserve the as-etched dielectric surface. Selection of an appropriate copper surface treatment is dependent upon the adhesive selected. All layers should be baked for 30 minutes at 100-125°C prior to bonding.

2. Adhesive Systems

Two categories of adhesive systems, thermoplastic and thermoset, can be used when bonding

Magtrex[™] 555 multilayers. Thermoplastics, such as Dupont's FEP or Rogers CuClad[™] 6700 and CuClad[™] 6250 films, are typically selected when electrical properties of the thin adhesive layers are critical. The dielectric constant and dissipation factor of the fluoropolymer thermoplastic films are low. As the PTFE resin system is a thermoplastic, direct or fusion bonding can be used to manufacture homogeneous multiplayer constructions.

Thermosets, such as FR-4 prepreg, Rogers' 2929 bondply and Rogers' Speedwave 300P prepreg can be chosen when thicker bonding layers are required and electrical properties are less critical.

3. Thermoplastics

Melting point is an important consideration when selecting a thermoplastic adhesive system. FEP melts at 500°F (260°C) and is therefore stable through most PCB and assembly processes. The 390°F (200°C) melting point of CuClad 6700 film can result in a

re-melting if subsequent PCB or assembly processes are higher in temperature and longer in duration than a few minutes. Copper surfaces should be prepared using an oxide alternative such as Bondilm [™] from Atotech or Multibond[™] from MacDermid.

The thermoplastic adhesives should be bonded with applied pressure between 50 and 250 PSI. The ramp to temperature (525-550°F, 275-290°C) for (FEP; 425-450°F, 220-230°C for CuClad 6700 can be 6-8°F/min (3.5-4.5°C/min) and the dwell at temperature should be 20-30 minutes. Cooling to 250°F (120°C) at a rate of 2-4°F/min (1.4-2.5°C/min) should be completed under pressure as transfer cooling can result in delamination.

4. Thermosets

Refer to vendor recommendations for appropriate oxide types and bond conditions when using thermoset adhesive systems.

5. Post-Bond PCB Processing

Guidelines for double-sided circuit processing would apply to multilayer through hole and outer-layer processing.

\\\ Figures Figure 1 Width = 1.5 - 2.0 x Tool Diameter Used to Rout Panel Depth - 0.060" - 0.100" Channels must extend beyond panel periphery Figure 3 Routing Peripheries Conventional Cut Figure 2 Clean Edge Counter Clockwise First Pass Loosely Attached Debris Figure 4 Routing Internal Cut-Outs Climb Cut Both Edges Clean Second Pass (Opposite Direction) Clockwise

Advanced Connectivity Solutions

\\\ 100 S. Roosevelt Avenue \\\ Chandler, AZ 85226 \\\ Tel: 480-961-1382 \\\ Fax: 480-961-4533 \\\ www.rogerscorp.com

The information in this preliminary data sheet is intended to assist you in designing with Rogers' circuit materials. It is not intended to and does not create any warranties express or implied, including any warranty of merchantability or fitness for a particular purpose or that the results shown on this data sheet will be achieved by a user for a particular purpose. The user should determine the suitability of Rogers' circuit materials for each application. These commodities, technology and software are exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law prohibited.

The Rogers' logo, Helping power, protect, connect our world, and MAGTREX are trademarks of Rogers Corporation or one of its subsidiaries. ©2024 Rogers Corporation, Printed in U.S.A., All rights reserved.

Issued 1422 011025 Publication #92-412

